PRODUCT INFORMATION:

Read this information before proceeding. It is the user's responsibility to take the following precautions at all times.

- Always stake or weigh down your canopy. Do not use in any potentially windy or rainy weather. Wind and rain can damage your product and may also result in injury to you or others. Therefore, do not rely on product for protection in heavy or prolonged rain storms.
- The canopy is designed as a temporary sun shelter. Do not leave up for extended periods.
- Use caution when handling the frame. Avoid pinching hands or fingers as frame opens or closes.
- Do not use canopy in a lightning storm.
- Do not leave your canopy unattended.
- Do not build fires under canopy.

PRODUCT CARE/MAINTENANCE:

For long lasting durability and the best possible protection for your canopy, follow these care and maintenance instructions:

- Use a mild soap (not detergent) and plenty of water for canopy cleaning.
- Let the canopy and frame dry completely before closing or storing to avoid mildew.
- The frame will operate and look better if occasionally wiped with silicone spray, especially before and after use in damp conditions. Remove excess silicone residue before attaching top.
- Slightly tighten bolts if frame becomes loose.

CRAFTSMAN LIMITED WARRANTY

FOR TWO YEARS from the date of sale this product is warranted against defects in material or workmanship.
WITH PROOF OF SALE return a defective product to the retailer from which it was purchased for free replacement.

This warranty covers ONLY defects in material or workmanship, and does not apply to accidental damage or damage from wind, rain or other forces of nature, nor to product that has been altered or modified in any manner.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Sears Brands Management Corporation, Hoffman Estates, IL 60179

CUSTOMER ASSISTANCE
(855) 497-4233

USER MANUAL

CRAFTSMAN®

Commercial Canopy

10ft. x 10ft.

(3.05m x 3.05m)

PACKAGE INCLUDES

- Canopy Frame
- Polyester Top
- 4-Piece Stake Kit
- Roll Away Bag

INITIAL SET UP

Please read each step before you attempt to set up. Save these instructions for future reference.

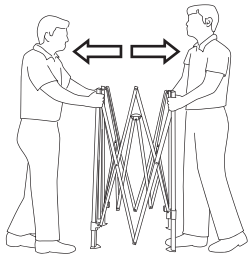

1. With partner, grasp two outer frame legs, slightly lift off the ground, and step backwards - stopping at full arms' length.

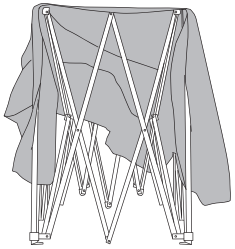

2. Unfold the canopy top and place it over the open frame.

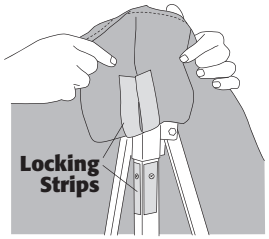

3. Secure the canopy top to the frame by attaching the locking strips on the canopy top with the locking strips on the frame. Pull the corners down fully.

SET UP

1. With partner on opposite side of canopy, place your frame in the center of area to be shaded. Grasp outer legs, lift off the ground, and step backwards - stopping at full arms' length.

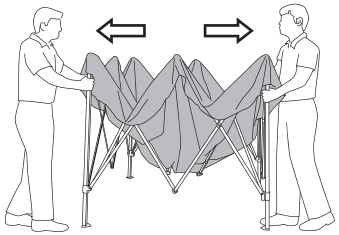

2. Grasp the top and bottom of the truss on opposite sides. Slightly lift canopy up and push hands together while stepping backwards until canopy is fully opened. Be careful not to pinch fingers or push too hard so as to avoid damage to truss.

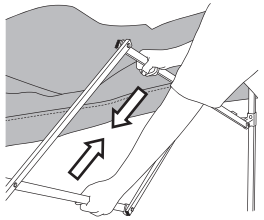

3. Engage Pull Pin slider at each corner by pushing up on slider with one hand while holding down on top of leg with other hand. Engage Pull Pin into hole.
Repeat on opposite legs.

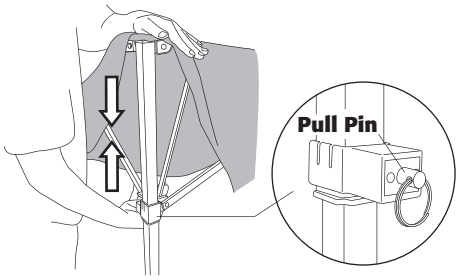

4. With partner, lift outer legs up and slide out the inner legs until the Pull Pin locks into outer legs.
Repeat on opposite legs.

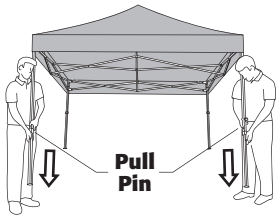

TAKE DOWN

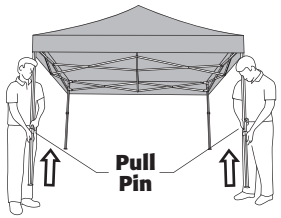

1. With partner, slightly lift up adjacent outer legs, release Pull Pin to unlock and telescope inner legs into outer legs.
Repeat on opposite legs.

2. 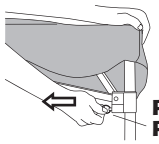

Release Pull Pin at each corner by first lifting fabric away from slider. With one hand push up on truss near the Pull Pin, pull pin out to release.
NOTE: It is much easier to release Pull Pin when the canopy weight has been removed from the Pull Pin.

3. Grasp top and bottom area of trusses. Lift the canopy up slightly and shake while stepping towards your partner until 3/4 closed. With each partner grasping two outer legs, push frame together to fully close it. *Be careful not to pinch fingers!*

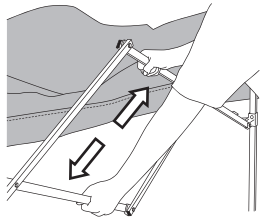

4. With partner on opposite side, grasp top and bottom area of trusses. Lift the canopy up slightly and shake it while stepping towards your partner until the unit is 3/4 closed. With each partner grasping two outer legs, push frame together to fully close it. ***Be careful not to pinch fingers***!
Store canopy in roll away bag.

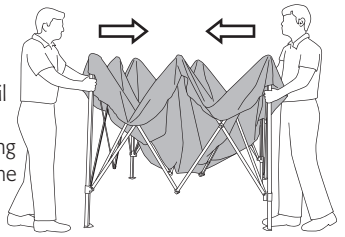

WARNING: Keep all flame and heat sources away from all product fabrics. These fabrics meet the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the fabric may render the flame-resistant properties ineffective.